- 1. Power on the system and press F8 during the option ROM.
- 2. Select the USB device.



3. Command [MR611.bat]

Statement of the second se
Microsoft(R) Windows 98 (C)Copyright Microsoft Corp 1981-1999.
C:\>cd 3108
C:\3108;mr611_
Currently flashing component = APP Erasing Flash
Programming Flash Completed: 100%
Verifying the Flashed Data
Currently flashing component = NVDT Erasing Flash
Programming Flash Completed: 100%
Verifying the Flashed Data
Currently flashing component = BTBL Erasing Flash
Programing Flash

Verifying the Flashed Data...

Success

 You can double confirm the FW Package Version (ex: 24.15.0_0016) in Avago boot ROM -> Controller Properties.

Asustek P	IKE 3108-8i BIOS Configuration Util
VD Mgmt PD Mgmt C	trl Mgnt Properties
Controller Status Serial No ROC Temperature Package FW Version BIOS Version	Properties Asustek PIKE 3108-8i Optimal 74 Celsius 24.15.0-0016 4.650.00-6121 6.31.03.0_4.17.08.00_0x06140200 3.07.00.00-0003